

Installation and Operation Manual

YBP Series Signal Programmer



american  time®

Integrated Solutions

February 2006

INSTALLATION AND OPERATION MANUAL

YBP Series Signal Programmers

YBP02E YBP02 YBP04 YBP06

Table of Contents

Introduction	2
Specifications	2
Glossary of Terms	3
Installation and Setup	
Mounting Instructions	4
Electrical Connections	4
Power Switch	4
Dip-switch Settings	4
Operating Procedures	
Keypad Description	5
Security Code	5
Run Mode	5
Set Mode	Set Time & Date 6
Program Mode	Enter & Delete Events into Schedules 7
	Assign Schedules to Circuits 7
	Set Signal Duration 8
	Review Program Events 8
Manual Mode	Manual Operation 9
Quick Tips for PRGM, FWD & ENT Buttons	9
Top View	10
Electrical Connections & Wiring Diagram	11

American Time
140 3rd St. South PO Box 707
Dassel, MN 55325-0707
Toll Free Phone: 800-328-8996
american-time.com

Introduction

The American Time YBP Signal Programmer Series consists of models YBP02E, YBP02, YBP04 and YBP06. They provide flexible control for 2, 4 or 6 output circuits, each independently programmable for momentary, ON/OFF or manual operation. Events are programmed into weekly schedules with one-minute increments allowing for up to 1440 events per schedule, any day(s) of the week. Sixteen (16) separate schedules are available to provide alternate schedule programming without editing the basic schedules. Note: the YBP02E provides only four (4) separate schedules. Each output circuit is assigned a schedule and signal duration in the programming mode. All programming is stored in non-volatile memory. User selectable features include Automatic Daylight Saving Time adjustment, 12 or 24 hour format and security code enable/disable.

SPECIFICATIONS

Input Voltage	120vac (220vac optional)
Input Frequency	50/60 Hz
Fuse	1/4 amp, 1/4" x 1 1/4"
Relays	10 amps SPDT
Timing Accuracy	± .001%
Signal Duration	1-9 seconds, ON/OFF
Daylight Saving Time Adjustment	Enabled from factory (dip switch disable)
Programmed Events	1440 per schedule - 16 schedules (excluding YBP02E)
Timekeeping Backup	3.6V lithium battery - 1200mA hours
Outside Dimensions	7.28"h x 8.38"w x 5.43"d
Mounting Dimensions	5.43"h x 7.76"w
Temperature Range	32°F-140°F (0°C-60°C)
Shipping Weight	4 lbs.

Glossary of Terms

- Event:** A programmed occurrence, such as class beginning and dismissal bells or the ON/OFF of a utility device.
- Schedule:** A sequence of events. Example: Daily or weekly bell schedule
- Signal Circuit:** A circuit which operates bells and/or utility devices in accordance with a programmed schedule of events.
- Signal Duration:** The elapsed time that a duration event activates its signals. Example: The length of time that bells ring.
- Utility Device:** A device connected to a signal circuit that is designed to be turned on or off, such as for lighting, environmental control or security. (Duration must be set to "0" to operate these types of devices)

Installation & Setup

Mounting Instructions

Unit has 3-point mounting provisions. Hang enclosure from the upper rear mounting hole and secure to the wall by using the two lower mounting holes located external to the wiring compartment. Remove the compartment cover to access the lower mounting holes which are slotted through-holes (see Page 10).

Electrical Connections

External wiring connections are made at the terminal blocks located inside the wiring compartment. Remove the two screws and cover to the wiring compartment to access a series of removable screw-terminal blocks. (see Page 10). A diagram showing input power connections and the relay output configuration is located inside the wiring compartment cover. 1/2" conduit knockouts are provided for either rear or bottom entry to the wiring compartment. Conduit hubs (not supplied) must be connected to the conduit before being connected to the enclosure.

Power Switch

The ON/OFF power switch is located in the upper right corner of the circuit board (see page 10). The four screws on the front panel must be removed to access the power switch.

Dip-Switch Settings

The unit is shipped with DS-1, DS-2 ON (12 hour time format & Automatic Daylight Saving Time) and DS-3 (Security Code), DS-4 OFF. The power switch must be in the OFF position to change any of the dip-switch settings. To access the dip-switches, remove the four screws from the front panel and locate dip-switches on the circuit board (see page 10).

DS-1 – Enables (ON) or disables (OFF) the Automatic Daylight Saving Time adjustment. Daylight Saving is programmed to start the first SUN in April at 2:00 AM and end on the last SUN in October at 2:00 AM.

DS-2 – Sets the time format. ON is 12 hour format and OFF is 24 hour format.

DS-3 – Enables (ON) or disables (OFF) the security code required to access SET, PRGM and MAN modes of operation.

DS-4 – Is not used.

Operating Procedures

Keypad Description

The 8-button keypad consists of two rows of four keys. The keys in the top row are used for mode selection (RUN, SET, PRGM, MAN). The keys in the bottom row are used to edit and enter data (FWD, ENT, STO, DEL).

RUN mode is the normal operating mode and may be pressed at any time to exit the other modes and return to normal operation.

SET mode is accessed to change time and/or date information.

PRGM (program) mode is a multiple mode key used to access four (4) programming modes. The PRGM key is pressed to alternate between 1) program events, 2) program circuit schedules, 3) program signal duration and 4) program review.

MAN (manual) mode is used to manually signal events.

FWD (forward) advances or edits the data displayed at the cursor.

ENT (enter) confirms the data displayed at the cursor and advances the cursor to the data location on the LCD display.

STO (store) is used to store an event or group of events into program memory.

DEL (delete) is used to delete an event or group of events from program memory.

Security Code

Security Code may be enabled (DS-3 ON) to prevent unauthorized access to the SET, PRGM and MAN modes of operation. An attempt to access these modes will result in a prompt for the security code. The code is pre-programmed at the factory as a sequence of three keystrokes—press SET, DEL then STO.

The Run Mode

The Run mode is the normal operating mode of the programmer and the time, day, date and active relays are shown on the display. When power is applied to the unit, it will be in the RUN mode. When not programming or setting the time/date, your unit should be in this mode.

	2:34:43PM
MON	5/02/05

The RUN button is pressed to exit other modes and return to normal operation.

The Cursor

While in SET, PRGM and MAN modes, the small black (non-blinking) cursor indicates the item which can be changed. The cursor is moved forward by pushing the ENT button.

SET MODE

To set the time of day:

- Push SET
- Notice the small black (non-blinking) cursor beneath the minute digit.

	2:34:43PM
MON	5/02/05

- Push and hold FWD and the minutes will start advancing...slowly at first, then faster after a couple of seconds. Release the button when you get close to the time you wish to enter. Then advance the minutes slowly by pressing FWD until the correct time is indicated. Note: You will not be able to back up when setting the time, so if you go past the time you need to enter, you will need to advance through nearly 24 hours to get back to the desired time.
- At this point, if you only want to adjust the time, you can push RUN to get out of SET mode. You do not need to push ENT. The time will be entered automatically when you push RUN.

Set or change day of week:

- If not already in SET mode, push SET
- Push ENT to move the cursor until it is beneath the first character of the day of week.

	2:34:43PM
<u>MON</u>	5/02/05

- Advance day of week by pushing FWD until the current day of the week is shown. At this point, if you only want to adjust the day of week, you can push RUN to get out of SET mode. You do not need to push ENT. The day of week will be entered automatically when you push RUN.

Set or change month:

- If not already in SET mode, push SET
- Push ENT to move cursor until it is beneath the month digit.

	2:34:43PM
MON	5/0 <u>2</u> /05

- Advance month by pushing FWD until the correct month is shown. At this point, if you only want to adjust the month, you can push RUN to get out of SET mode. You do not need to push ENT. The month will be entered automatically when you push RUN.

Set or change day of month:

- If not already in SET mode, push SET.
- Push ENT to move the cursor until it is beneath the digit of the date.

	2:34:43PM
MON	5/02/ <u>05</u>

- Advance the date by pushing FWD until the correct date is shown. At this point, if you only want to adjust the date, you can push RUN to get out of SET mode. You do not need to push ENT. The date will be entered automatically when you push RUN.

Set or change the year:

- If not already in SET mode, push SET.
- Push ENT to move the cursor until it is beneath the digit of the year.

	2:34:43PM
MON	5/02/0 <u>5</u>

- Advance the year by pushing FWD until the correct year is shown. At this point, if you only want to adjust the year, you can push RUN to get out of SET mode. You do not need to push ENT. The year will be entered automatically when you push RUN.

PROGRAM MODE

Entering/deleting circuit events:

- Push PRGM to enter the PROGRAM mode.
- Move to the desired schedule (1 through G) you wish to add or change by pushing FWD.

SCH <u>1</u>	2:34PM
MON	

- Move the cursor to the event time (in the upper right hand corner) by pushing ENT.

SCH 1	2:3 <u>4</u> PM
MON	

- Advance the event time to the desired time at which you want an event to occur by slowly pushing FWD.
- Push ENT until the cursor is beneath the event days indicator.

SCH 1	2:34PM
<u>WDY</u>	

- Change the event day(s) to the desired day(s) by pushing FWD. Event day choices are:
 EDY: Event will occur every day of the week.
 WDY: Event will occur every week day, Monday through Friday (most common).
 MON: Event will occur only every Monday.
 TUE: Event will occur only every Tuesday.
 WED: Event will occur only every Wednesday.
 THR: Event will occur only every Thursday.
 FRI: Event will occur only every Friday.
 SAT: Event will occur only every Saturday.
 SUN: Event will occur only every Sunday.
- Push STO to store the displayed event day and time in the displayed schedule. At this time the day(s) you have selected will display in the lower right hand corner

SCH 1	2:34PM
<u>WDY</u>	MTWTF

- Push RUN to go back to normal operating mode.
- To delete an event(s) within a schedule: Push PRGM (if not already in this mode). Move to the desired schedule by pushing FWD. Push ENT to move cursor to time and advance to the event time you want to delete. Push ENT to move cursor to the day of week indicator in the lower left corner and push FWD to advance to the day of the week to be deleted (if you want to delete the event completely FWD the day of week indicator to EDY). The deleted day(s) will no longer appear in the lower right hand corner. Push RUN to go back to normal operating mode.

ASSIGNING SCHEDULES TO OUTPUT CIRCUITS

Once events have been programmed into a schedule, the schedule must be directed to an available circuit or circuits (enabled). If this is not done, the event operation will not occur.

- From RUN mode push PRGM twice to enter the schedule-circuit assignment mode.

CKT	123456
SCH	<u>1</u> 11111

- Move the cursor to the desired circuit by pushing ENT. (Display will vary depending on the number of circuits included with your model). To direct a schedule to that circuit, push FWD until the desired schedule number appears. Do the same for the remaining circuits if necessary. When done, push RUN to enter your selections and return to normal operating mode.

SETTING SIGNAL DURATION

- From RUN mode, push PRGM three (3) times. All circuits and their associated event durations (in seconds) will be displayed.

CKT	123456
DUR	000000

- To set or change the duration of a circuit, push ENT until the cursor is beneath the circuit duration that you want to change.

CKT	123456
DUR	060000

- Push FWD to advance the circuit duration (0-9 seconds). A duration of zero (0) programs the circuit for ON/OFF operation (the circuit will toggle ON/OFF state each time an event occurs). Make appropriate modifications to remaining circuit durations. Push RUN to enter settings and return to normal operating mode.

REVIEWING PROGRAM EVENTS (Programmed Event Review Mode)

- From the RUN mode, push PRGM four (4) times to enter programmed event review mode. Schedule 1 will be shown in the upper left hand corner and event time will appear in the upper right hand corner.

SCH 1	2:34PM
MON	

- Push FWD to the schedule to be reviewed (1-G).
- Push ENT to move the cursor to the time.
- Push FWD to advance to the next programmed event within the schedule. Event days will appear beneath the time as a string of characters representing the day of the week when the event will occur. Continue pushing FWD to advance through the entire schedule. Note: As the current time is displayed, event review will begin with the next scheduled event after that time and continue through the entire schedule from there.

SCH	13:00PM
WED	SMTWTFS

SCH	13:50PM
WED	MWF

Example: The character string SMTWTFS indicates that the event will occur every day Sunday-Saturday at the time shown.

Example: The character string MWF indicates that the event will occur Monday, Wednesday and Friday at the time shown.

Within program event review mode, new event times may not be entered. The user must return to RUN mode and then go to Program mode (push PRGM once) to enter new events.

Within program event review mode, the user is allowed to modify event days (add or delete) at an existing event time or delete an event time completely.

MANUAL OPERATION OF CIRCUITS

- From RUN mode, push MAN. The display will show all circuits on the top row with a 1 or 0 below the circuit. A "0" indicates the circuit is not selected for manual operation. A "1" indicates the circuit has been selected for manual operation.

CKT	123456
MAN	110111

CKT	123456
MAN	100000

- To change the select or deselect status of a circuit, push ENT to move the cursor to the circuit to be changed. Push FWD to show either 1 (enabled) or 0 (disabled).
- Once the circuits have been selected, push MAN to activate the selected circuits. The MAN button can be pushed repeatedly to operate the selected circuits while still in MAN mode.
- When manual operation is complete, deselect circuits (see above), then push RUN to return to normal operation.

QUICK TIPS:

PRGM (PROGRAM) KEY ACCESS NAVIGATION:

- Push one (1) time to enter program mode
- Push two (2) times to direct schedules to output circuits
- Push three (3) times to set circuit event duration time
- Push four (4) times to enter programmed event review mode

USING FWD AND ENT BUTTONS WITHIN ABOVE MODES:


- The FWD button edits (advances) the data at the cursor:
i.e. In this example FWD would advance the month.

	2:34:43PM
MON	5/02/05


- The ENT button moves the cursor to the next data field:
i.e. In this example pressing ENT would move the cursor from the date to the year.

	2:34:43PM
MON	5/02/05

Programmer Front View

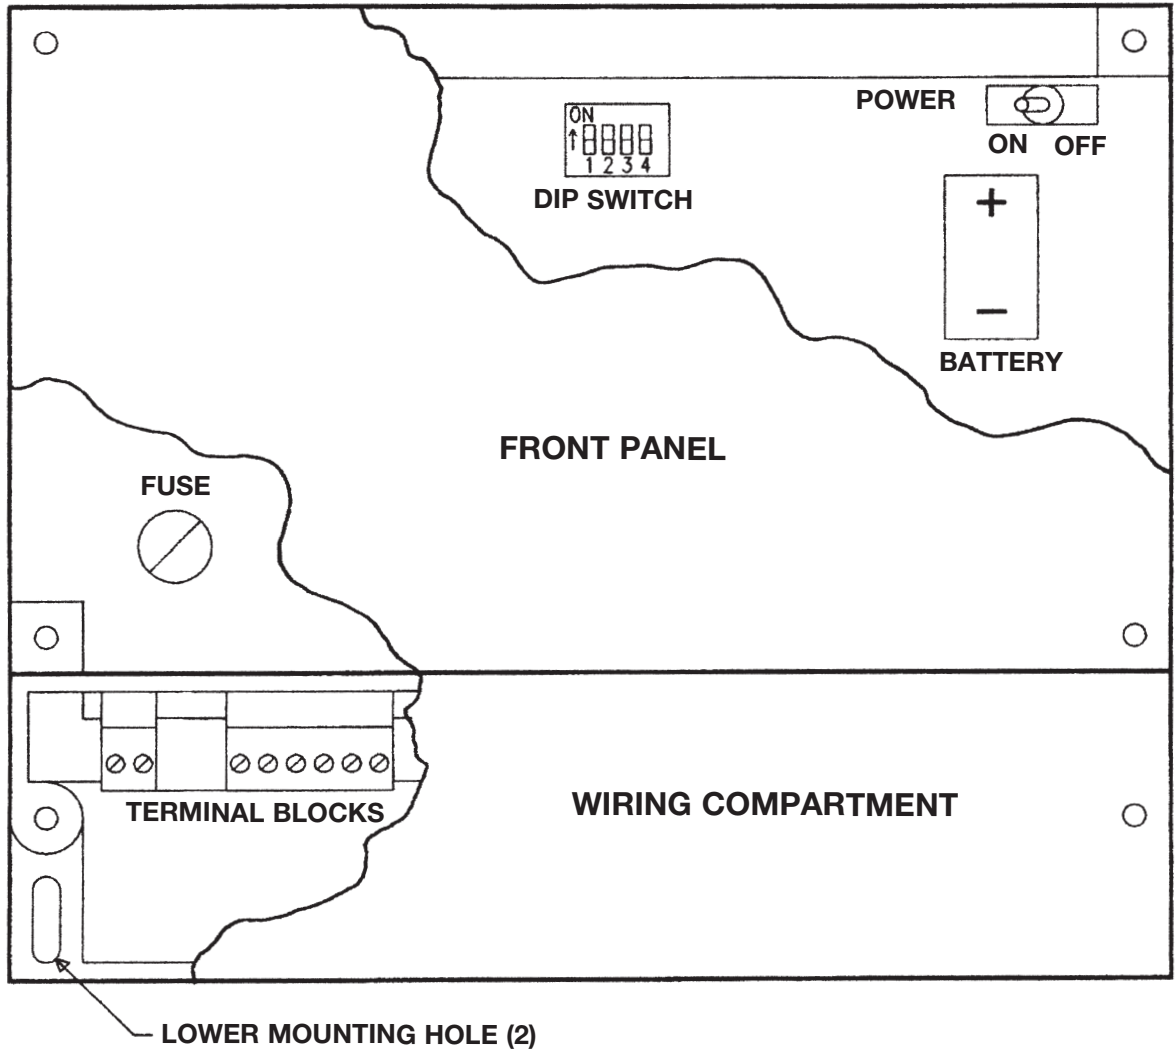

Programmer Wiring Diagram

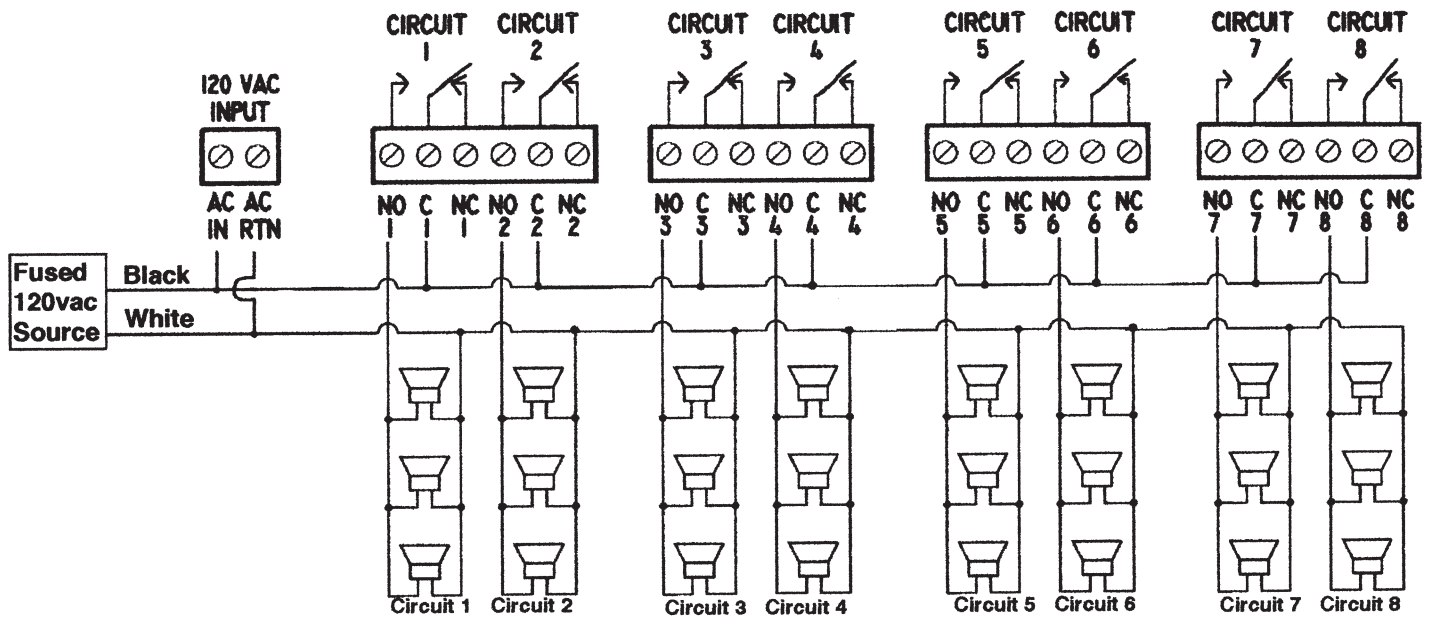

This diagram is using 120vac bells (user supplied step-down transformer required for low voltage (24vac) signals).

Relays shown in disabled position.