

# Installation and Operation Manual



## Wireless Indoor Strobe



For additional support on the Wireless Indoor Strobe or on any of the American Time products, please call or visit our web site.

American Time  
140 3rd St. So.  
PO Box 707  
Dassel, MN 55325-0707

Toll Free Phone: **800-328-8996**

Toll Free Fax: **800-789-1882**

[american-time.com](http://american-time.com)

The SiteSync IQ® Wireless Strobe/Siren is an outdoor device which is triggered wirelessly by the SiteSync IQ System Controller. This Wireless Strobe/Siren may be triggered by programmed events in the system controller, on demand using the MAN button on the system controller or the Circuit tab of the Remote Connect web interface (using a SiteSync IQ system controller with the Ethernet option and a computer with internet access).


Each Wireless Strobe/Siren is factory set to one of the wired signal circuit relays in the system controller. The part number will indicate which circuit of the system controller the strobe is configured to (i.e. H004580W-1 is set to circuit 1, H004580W-2 is set to circuit 2).

## Features

- Easy to mount via keyhole slots on the back of the Strobe
- Includes 10 high-intensity LED's
- Siren has up to 32 user selectable tones
- Siren volume is user selectable between 85dB or 100dB
- White lens comes standard (amber, blue, green and red also available)

## Part Number Description

**H004580W-1 = Wireless strobe/Siren with white lens for circuit 1**

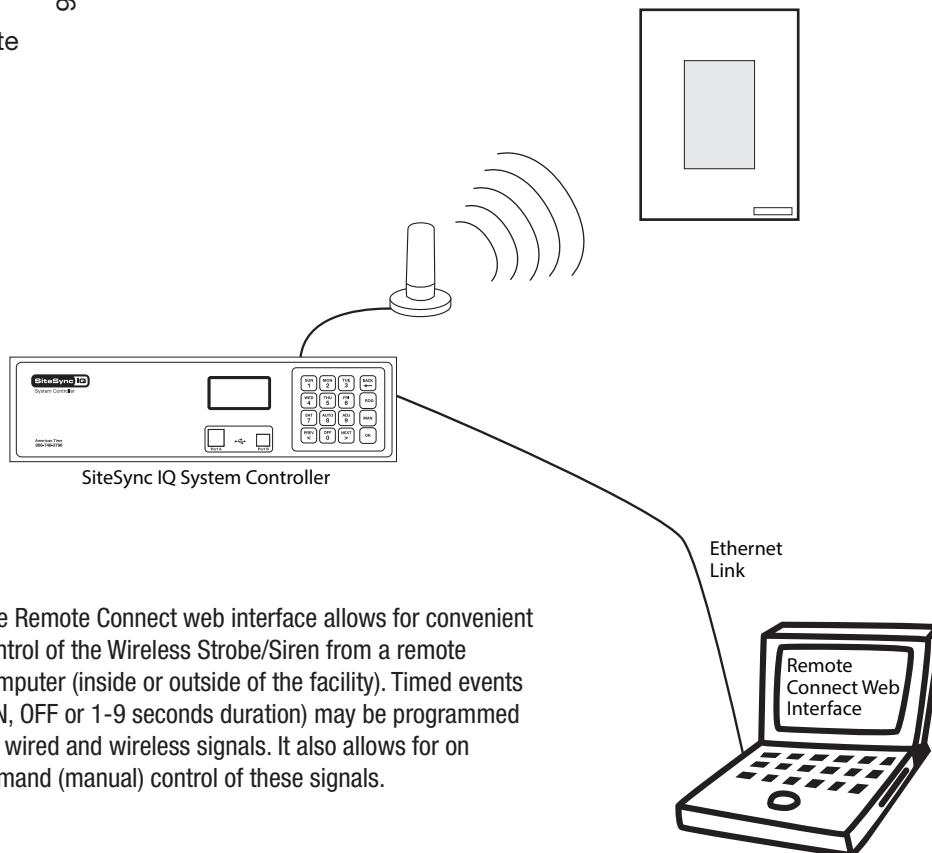

# Specifications




## Wireless Indoor Strobe/Siren

<b>Dimensions:</b>	10"h x 7"w x 5 1/2"d
<b>Weight:</b>	2.5 lbs.
<b>Power options:</b>	120vac-240vac, 0.07A, 50-60 Hz (hard wired)
<b>Operating temperature:</b>	14°-140°F (-10°-60°C)
<b>Humidity:</b>	0%-95% non-condensing
<b>Bell volume:</b>	85 or 100 dB (user selectable)
<b>Receiver frequency:</b>	450-470 MHz (factory set)
<b>Paging format:</b>	POCSAG, narrow band
<b>Data baud rate:</b>	512 BPS
<b>Receiver sensitivity:</b>	10uV/M
<b>Channel spacing:</b>	12.5 KHz

## Mounting Instructions

The Wireless Indoor Strobe/Siren may be easily mounted to a wall using the six keyhole openings on the back of the enclosure.


*Mounting screws not provided.*

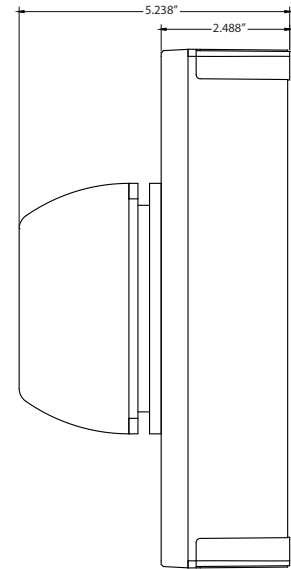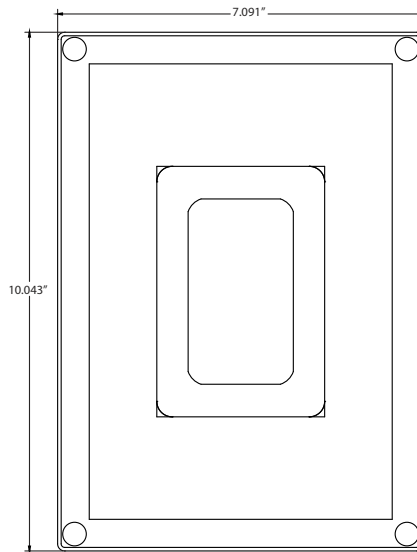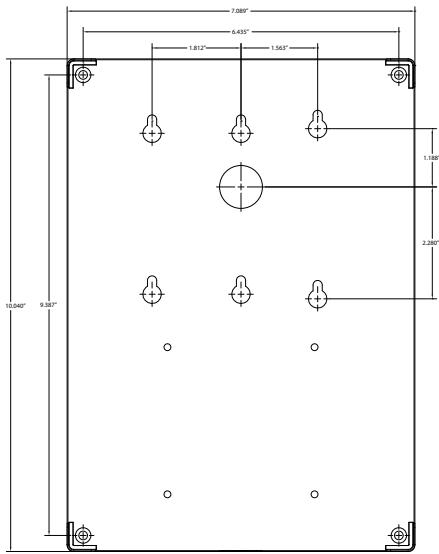



### Alarm Timing and Volume - S2


The strobe/siren's alarm timing and volume may be changed by removing the lens cover and changing the setting on dip switch S2. Use the supplied key to remove the lens.

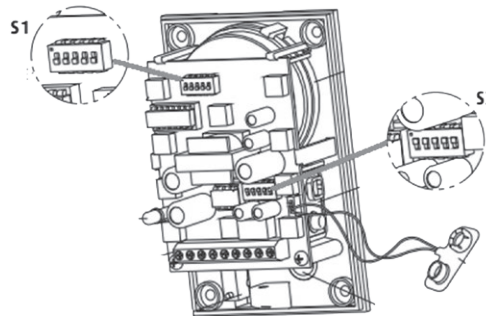

The table below shows the different alarm timings and volumes available and the proper dip switch setting for each.

**Note:** Low Volume = 85dB High Volume = 100dB

### ALARM TIMING AND VOLUME - S2

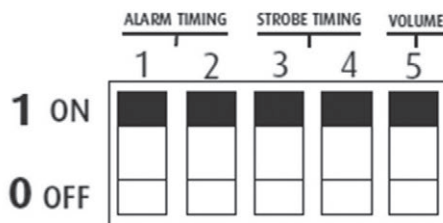

ALARM TIMING	SIREN		STROBE		VOLUME
	1	2	3	4	5
15 seconds	1	1	1	1	High
30 seconds	1	0	1	0	1
60 seconds	0	1	0	1	Low
* Continuous	0	0	0	0	0

1 = ON 0 = OFF

\* Factory default settings

To manually activate the Wireless Indoor Strobe/Siren using the Remote Connect web interface:

1. Enter your SiteSync IQ system controller IP address into a web browser (such as Internet Explorer)



2. Log in with your User name and Password
3. Select Circuit tab
4. Select the Manual Activation tab
5. Change the Signal Duration for the appropriate circuit to your desired duration (1-9 seconds, ON)
6. Enable the circuit # associated with your Wireless Indoor Strobe by putting a check mark in the appropriate box
7. Click on the Wireless button

The Wireless Indoor Strobe will sound and flash for the duration set in the Remote Connect application.

