



# American Time Wi-Fi Clock Setup Instructions for Steel Double-Dial Clocks

Thank you for choosing American Time Wi-Fi Clocks for your synchronized time needs.

IMPORTANT: If the double-dial ring has not already been mounted, refer to the instructions provided in the double-dial ring kit for mounting the ring, then return to these instructions to set up and mount the clocks.

## ▶ Getting Started: For Customers with Preconfigured/Preprovisioned Clocks

If your Wi-Fi clocks were preconfigured/preprovisioned by American Time, visit [click.american-time.com/dd-install](https://click.american-time.com/dd-install) or scan the QR code for installation instructions.



If you have an inCloud subscription and need to activate your clocks, follow the instructions below, under "Activate Your Clocks on inCloud".

## ▶ Getting Started: For Customers needing to Self-Configure/Self-Provision Their Clocks

If your Wi-Fi clocks were not preconfigured/preprovisioned by American Time, you'll need to self-configure and provision your clocks. Follow one of these instructions to complete this process.



Configure and provision your clocks using our Network Clock Setup app for Android.

Download and Install  
<https://click.american-time.com/app>



Configure and provision your clocks using a computer/tablet.



<https://click.american-time.com/provision>



## inCloud Subscribers: Activate Your Clocks on inCloud

If your network clocks are configured and provisioned, you can activate them on inCloud using our Android App (fast and easy) or on a computer.



Activate provisioned clocks on inCloud using our Network Clock Setup app for Android.

Download and Install  
<https://click.american-time.com/app>



Activate your provisioned clocks on inCloud using a computer/tablet.



<https://click.american-time.com/activate>

If you need help or have questions, please visit [american-time.com/support](https://american-time.com/support) or call 800-328-8996 to connect with our customer service team.

