


INSTRUCTIONS - CONNECTING STI LOCKDOWN BUTTONS TO EVERALERT INTEGRATOR

INSTRUCTION SHEET: 3394

REVISION: 01

EFFECTIVE: 06-14-2023

1. Determine the desired location of the lockdown button. The button location must be no more than 25 feet (wired length) from the Integrator.
2. Pull two runs of wire (18AWG minimum) from the location of the Integrator to the location of the button.

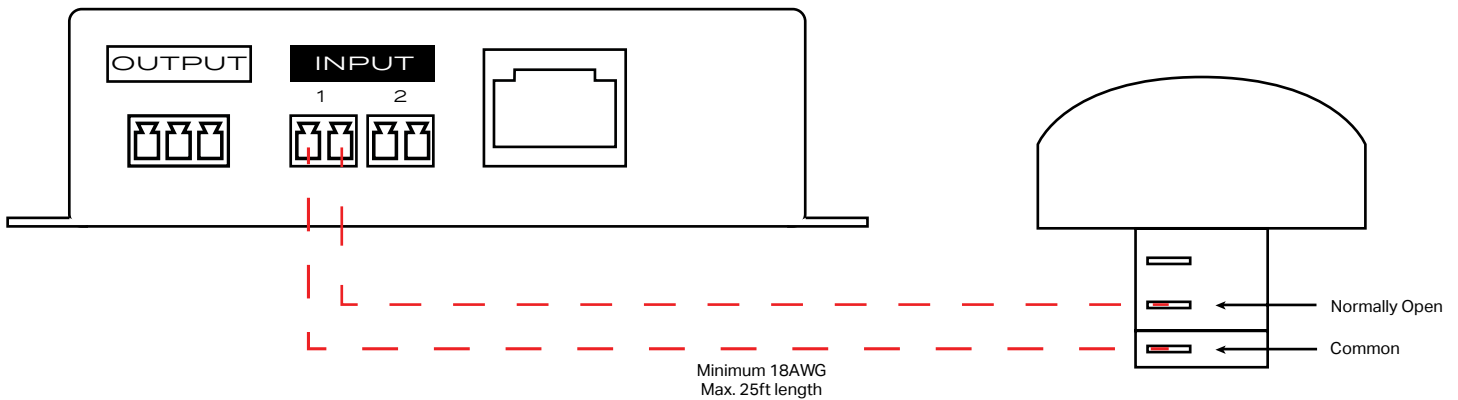

3. Connect one of the included wire terminals to the "COM" prong on the button switch.
4. Connect one of the included wire terminals to the "NO" prong on the same side of the button switch.
5. Use wire nuts to join the wires running from the Integrator location to the leads on the terminals.

WARNING: ILLUMINATION WIRING MUST NOT BE CONNECTED TO THE INTEGRATOR; DAMAGE TO THE INTEGRATOR WILL OCCUR AND IS NOT COVERED BY WARRANTY.

ILLUMINATION WIRING MUST BE CONNECTED TO FACILITY 12-24V POWER IF USED. THE INTEGRATOR CANNOT PROVIDE POWER TO THE ILLUMINATION.

6. If using the optional LED illumination for the button, follow the instructions on page 3 in STI Installation Instructions booklet included with the button.
7. Connect the wires to the terminal block provided with the Integrator and plug the terminal block in to the desired Input.
8. Set up the Integrator alarm as described in the Integrator instructions.