## Wi-Fi BATTERY CLOCK SELF-CONFIGURATION – QUICK START GUIDE

12

The clock will act as a limited access point for direct Wi-Fi communication to complete configuration. After connecting to the clock with a Wi-Fi enabled device, it can be configured with a web browser.

## What you will need:

American Time Wi-Fi clock


A Wi-Fi enabled device

## NOTE: It is beneficial to begin this process near the location you will hang the clock to verify Wi-Fi signal strength.


- 1. Confirm red gear locking pin is removed from movement
- 2. Insert barrel jack from battery pack into receiver
  - wait for LED to stop flashing red
- **3.** Press & hold button down on receiver (1-3 seconds)
  - watch for LED to flash orange once, then release button
- 4. LED will alternate red/green, indicating Wi-Fi transmission
  - if not, unplug barrel jack and return to step 2
- Connect to the clock from a Wi-Fi enabled device by finding "American-Time - xxxxxx" as an available network (see examples – lower right)
- 6. Enter 192.168.240.1 into the URL of a web browser
- 7. Configure clock through browser window:
  - Select your Time Zone from dropdown menu
  - Select Daylight Saving Time option
  - use AUTO unless your location does not observe DST
  - Leave Use DNS selected, Pool Domain Name e.g., 1.americantime.pool.ntp.org
  - Leave Use Default Location selected
  - Save to confirm settings
  - Select Wi-Fi Configuration
  - Select Wireless and Network Configuration
  - Select an Existing Network
  - From menu, **Select SSID** (wireless access point) to connect to
  - Enter Security/Passphrase for network
  - Leave Advanced Options unchecked
  - Select Next
  - Select Save and Apply, LED will flash red
  - watch for LED to flash green (received time) then go dark

The clock should now be connected to your Wi-Fi. NOTE: The hands will move rapidly, making one complete rotation before reaching the correct time.

If you have questions, call: 800-328-8996

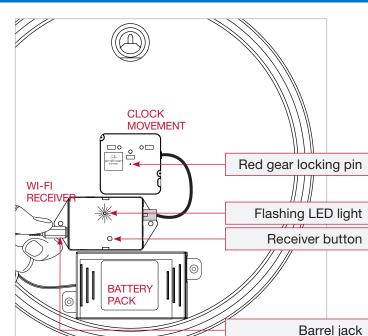

or

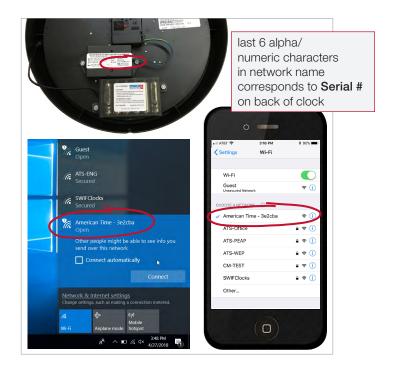



Integrated Solutions